

E♭ ALTO SAXOPHONE FINGERING CHART

Take Special Care


Before putting your instrument back in its case after playing, do the following:

- Remove the reed and wipe off excess moisture. Return to reed case.
- Remove mouthpiece and wipe the inside with a clean cloth. Wash your mouthpiece once per week with warm tap water. Dry thoroughly.
- Remove the neck and shake out excess moisture. Dry with neck cleaner.
- Drop the weight of the chamois or cotton swab into the bell. Pull the swab through the body several times. Return the instrument to its case.

○ = OPEN

● = PRESSED DOWN

The most common fingering appears first when two fingerings are shown.

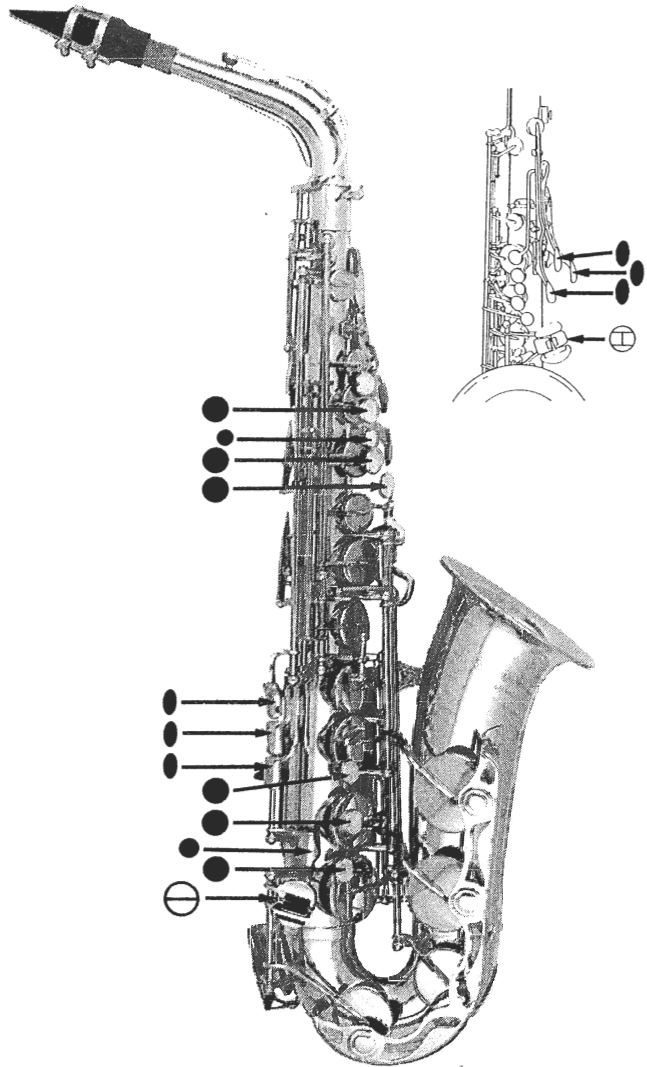

Instrument courtesy of Yamaha Corporation of America Band and Orchestral Division.

<p>A# B♭</p>		<p>B</p>		<p>C</p>		<p>C# D♭</p>	
<p>D</p>		<p>D# E♭</p>		<p>E</p>		<p>F</p>	
<p>F# G♭</p>		<p>G</p>					

G# Ab

A

A# Bb

B

C

C# Db

D

D# Eb

E

F

F# Gb

G

G# Ab

A

A# Bb

B

C

C# Db

D

D# Eb

E

F